



website <http://www.lgservice.com>

LG

LG

PI485 GATEWAY

INSTALLATION MANUAL

Model: PSNFP14A0

For use with ERV product in USA and select other LG Products that do not have on-board LGAP communications module.

IMPORTANT

- Please read this installation manual completely before installing the product.
- Installation work must be performed in accordance with the national wiring standards by authorized personnel only.
- Please retain this installation manual for future reference after reading it thoroughly.

TABLE OF CONTENTS

■ Safety Precautions.....	3
■ Part Descriptions.....	5
■ Installation Guide	6
■ Accessory Parts	10

Safety Precautions

To prevent injury to the user or other people and property damage, the following instructions must be followed.

- Incorrect operation due to ignoring instructions will cause harm or damage. The seriousness is classified by the following indications.

WARNING

This symbol indicates the possibility of death or serious injury.

CAUTION

This symbol indicates the possibility of injury or product damage.

- Meanings of symbols used in this manual are as shown below.



Do not complete the action.




Be sure to follow the instruction.

WARNING


■ Installation

Do not touch the product with your hands while electricity is on.

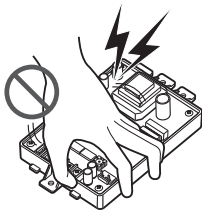

There is a risk of fire or electric shock if you touch the product with your hands while the electricity is on.

Use standard parts(connector).

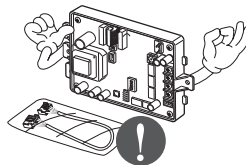


Do not disassemble or repair the product. There is risk of fire or electric shock.

For electrical work, contact the dealer, seller, a qualified electrician, or an authorized service center.



Do not disassemble or repair the product. There is risk of fire or electric shock.

Use the correctly rated breaker or fuse.

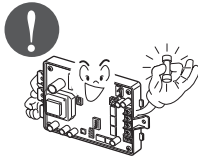


There is a risk of fire or electric shock if the correctly rated breaker or fuse is not used.

Do not install, remove, or re-install the unit by yourself (customer).



There is risk of fire, electric shock, explosion, or injury.


For installation, always contact the dealer or an authorized service center.

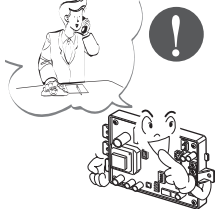

There is risk of fire, electric shock, explosion, or injury.


■ Operation

When the product is soaked (flooded or submerged), contact an authorized service center.

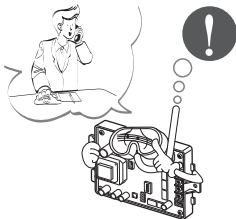


There is risk of fire or electric shock.

Be cautious, water should not enter the product.

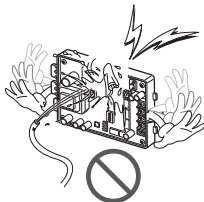

There is risk of fire, electric shock, or product damage.

PSNFP14A0

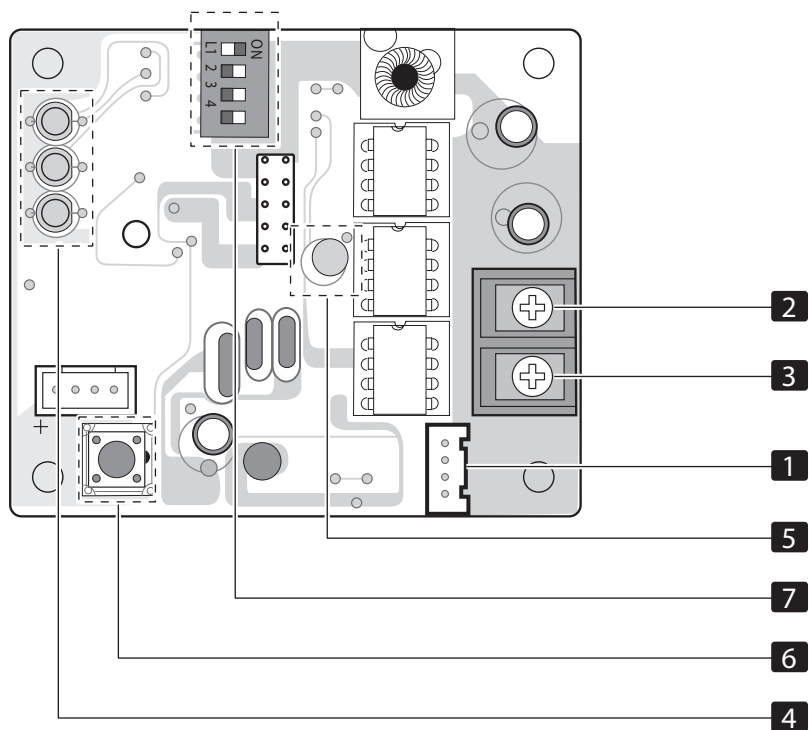


PI485 GATEWAY(R)

- 1 CN_OUT: Indoor Unit Connector
- 2 BUS_A: RS-485 (+) Terminal
- 3 BUS_B: RS-485 (-) Terminal
- 4 LED01G,02G,03G: Communication Status LED
- 5 LED1: RS-485 Communication Status LED
- 6 Reset Switch: PI485(C) Reset
- 7 DIP Switch: Product Select (Refer to page 7)



Installation Guide

Installation Steps

1. **7** Select DIP Switch Configuration (Refer to page 7)
2. **2** **3** Connect The RS-485 BUS_A(+), BUS_B(-) with other network products (ex. Simple Central Controller , CNU, etc.)
3. **1** Using the provided cable, connect CN_OUT with outdoor unit
4. **4** Check the Communication Status LED
 - LED01G(Red): Ok operation - The LED blinks 5 times and is OFF.
This process is repeated every 3 minutes
 - NG operation : Check the indoor unit address and wiring connections
 - LED02G(Yellow), LED03G(Orange): Ok operation- The LEDs blink continuously
 - NG operation : Check the DIP Switch setting and wiring connections
5. **5** Check the RS-485 Communication Status LED:
 - Ok operation
 - (1) If connected to a CNU, LEDs blink 2 times every 10~30 seconds
 - (2) If connected to a simple central controller, LEDs blink continuously
 - NG operation : Check the wiring connections
6. If the above steps are Ok, tie the cables using tie wraps and clamp

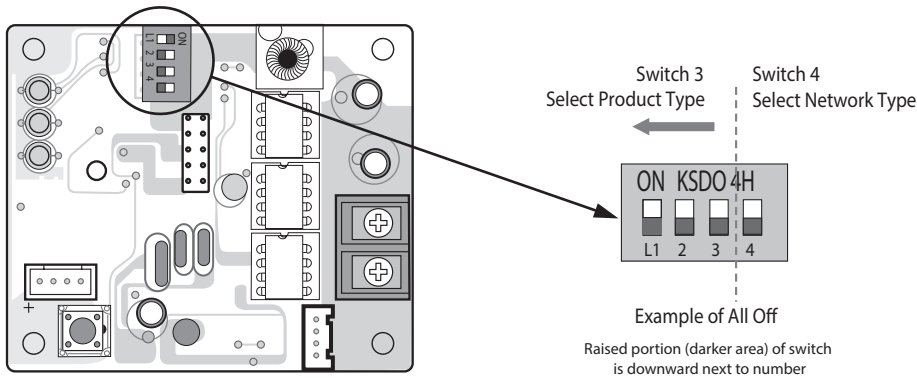


Using LGAP CAC/RAC/SRAC/PAC Products Configuration Methods

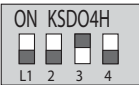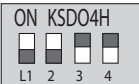-  ➔ 1 OFF, 2 OFF, 3 ON, 4 OFF: LGAP CAC/RAC/SRAC/PAC Products + Central controller (all types) - without LGAP
-  ➔ 1 OFF, 2 OFF, 3 ON, 4 ON: LGAP CAC/RAC/SRAC/PAC Products + Central controller (all types) - using LGAP




CAUTION:
Incorrect product configuration will lead to product malfunction.

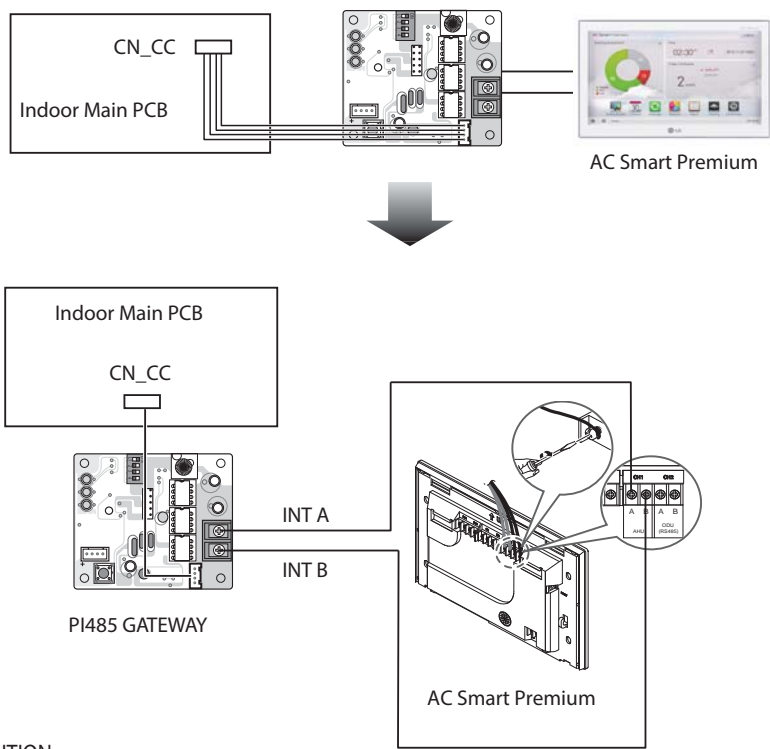

CAUTION:
After product installation, secure the wiring with tie wraps (provided).

Installation Example





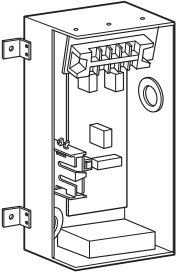


Installation for ducted units



CAUTION:
Installation instructions may differ based on the product.

Accessories

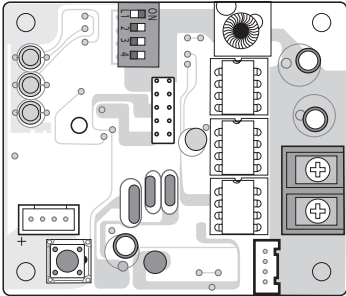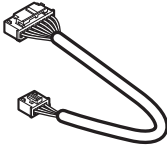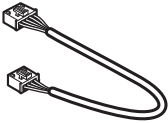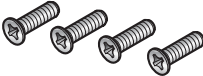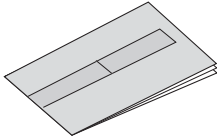		
	Connector for use with ERV	Connector for other product
		
	Screws (4 EA)	Installation Manual

Other Included Items: Tie Wrap (3 EA) - Cable Tie Clamp (1 EA)



After reading this manual, keep it in a place easily accessible to the user for future reference.