

INSTALLATION MANUAL AIR CONDITIONER

- Please read this installation manual completely before installing the product.
- Installation work must be performed in accordance with the national wiring standards by authorized personnel only.
- Please retain this installation manual for future reference after reading it thoroughly.

TYPE: Vertical Air Handling Unit

www.lg.com P/NO: MFL65003102

IMPORTANT!

Please read this instruction sheet completely before installing the product.

This air conditioning system meets strict safety and operating standards. As the installer or service person, it is an important part of your job to install or service the system so it operates safely and efficiently.

♠ WARNING

- · Installation or repairs made by unqualified persons can result in hazards to you and others. Installation MUST conform with local building codes or, in the absence of local codes, with the National Electrical Code NFPA 70/ANSI C1-1993 or current edition and Canadian Electrical Code Part1 CSA C.22.1.
- The information contained in the manual is intended for use by a qualified service technician familiar with safety procedures and equipped with the proper tools and test instruments.
- · Failure to carefully read and follow all instructions in this manual can result in equipment malfunction, property damage, personal injury and/or death.

CAUTION: Improper installation, adjustment, alteration, service or maintenance can void the warranty. The weight of the condensing unit requires caution and proper handling procedures when lifting or moving to avoid personal injury. Use care to avoid contact with sharp or pointed edges.

- Always wear safety eye wear and work gloves when installing equipment.
- Never assume electrical power is disconnected. Check with meter and equipment.
- · Keep hands out of fan areas when power is connected to equipment.
- R410A causes frostbite burns.
- R410A is toxic when burned.

NOTE TO INSTALLING DEALER: The Owners Instructions and Warranty are to be given to the owner or prominently displayed near the indoor Furnace/Air Handler Unit.

WARNING

When wiring:
Electrical shock can cause severe personal injury or death. Only a qualified, experienced electrician should attempt to wire this system.

- · Do not supply power to the unit until all wiring and tubing are completed or reconnected and checked.
- · Highly dangerous electrical voltages are used in this system. Carefully refer to the wiring diagram and these instructions when wiring. Improper connections and inadequate grounding can cause accidental injury or death.
- Ground the unit following local electrical codes.
- · Connect all wiring tightly. Loose wiring may cause overheating at connection points and a possible fire hazard. When transporting:

Be careful when picking up and moving the indoor and outdoor units. Get a partner to help, and bend your knees when lifting to reduce strain on your back. Sharp edges or thin aluminum fins on the air conditioner can cut your finger.

When installing...

- ... in a wall: Make sure the wall is strong enough to hold the unit's weight.
- It may be necessary to construct a strong wood or metal frame to provide added support. ... in a room: Properly insulate any tubing run inside a room to prevent "sweating" that can cause dripping and water damage to wall and floors.
- ... in moist or uneven locatinons: Use a raised concrete pad or concrete blocks provide a solid, level foundation for the outdoor unit. This prevents water damage and abnormal vibration.
- ... in an area with high winds: Securely anchor the outdoor unit down with bolts and a metal frame. Provide a suitable air baffle.
- ... in a snowy area(for Heat Pump Model): Install the outdoor unit on a raised platform that is higher than drifting snow. Provide snow vents.

When connecting refrigerant tubing

- Keep all tubing runs as short as possible.
- · Use the flare method for connecting tubing.
- Check carefully for leaks before starting the test run.

When servicing


- Turn the power OFF at the main power box(mains) before opening the unit to check or repair electrical parts and wiring.
- Keep your fingers and clothing away from any moving parts.
- Clean up the site after you finish, remembering to check that no metal scraps or bits of wiring have been left inside the unit being serviced.

TABLE OF CONTENTS

Required Parts Required Tools Installation Requirements Features4 Accessories 4 Duct Connection Dimensions .. 5 Safety Precautions......6 Installation8 Selection of the best location ... 8 Upflow Installation9 Duct work......10 □ Level gauge Horizontal-left Installation11 □ Screw driver Connecting Pipes to the Indoor ☐ Electric drill ☐ Four type "A" screws Unit12 ☐ Hole core drill Preparation of Piping......12 Insulation.....15 ☐ Pipes: Gas side ☐ Hexagonal wrench Condensate Drain16 Liquid side (Refer to □ Gas-leak detector Wiring Connection.....18 Product Data) ■ Vacuum pump Installation of Wired Remote Insulation materials Gauge manifold Controller20 □ Additional drain pipe Name and function of wired remote controller(Accessory).22 Name and function of wireless remote controller(Accessory).23 Electric Heater24 Dip Switch Setting of Indoor unit ☐ Owner's manual PCB......25 □ Thermometer Group Control Setting26 How to Set E.S.P?30 Product Data32 □ Electric Heater installation External Static Pressure & Air manual Flow......32 Minimum airflow by heater capacity......33 Electric Heater Static pressure drop factors......33

Air Filter (Field supply) Static pressure drop factors34


Features

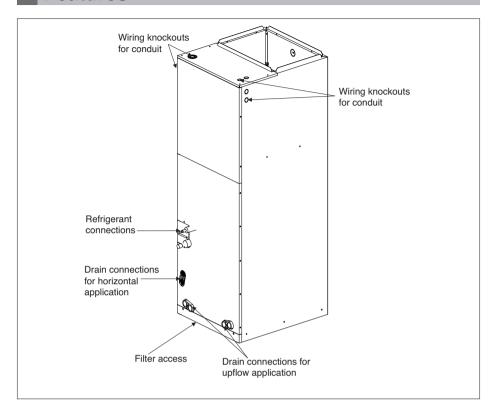

Accessories

Accessory	Model Name
Wired remote controller	PQRCVSL0 (Black Color) PQRCVSL0QW (White Color)
Wireless remote controller	PQWRCDF0 (Heat pump) PQWRHDF0 (Cooling only)
Electric heater	ANEH053B1 ANEH103B2 ANEH153B2 ANEH203B2

Duct Connection Dimensions

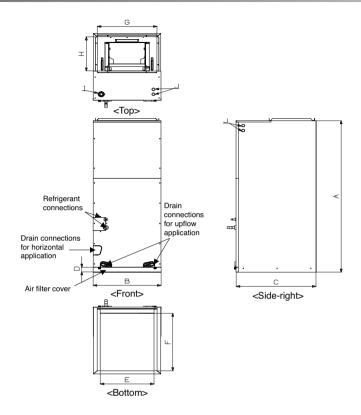

(Unit: inch(mm))

	Dimensions						Wiring Knock out		Refrigerant Connections			
Capacity (kBtu/h (RT))	А	В	С	1 J		E F G H		J		size		
	Height Width Depth D E F G	П	POWER	Commu nication	Liquid	Gas						
18(1.5)	48-5/8 (1236)	18 (457)	21-3/8 (540)	1-9/16 (40)	17-1/2 (445)	20 (530)	17 (432)	12-1/8 (308)	1-11/16 (43)	7/8 (22)	1/4 (6.35)	1/2 (12.7)
24(2.0) 30(2.5) 36(3.0)	48-5/8 (1236)	18 (457)	21-3/8 (540)	1-9/16 (40)	17-1/2 (445)	20 (530)	17 (432)	12-1/8 (308)	1-11/16 (43)	7/8 (22)	3/8 (9.52)	5/8 (15.88)
42(3.5) 48(4.0) 54(4.5)	55-1/8 (1401)	25 (635)	21-3/8 (540)	1-9/16 (40)	24-1/2 (623)	20 (530)	24 (610)	12-1/8 (308)	1-11/16 (43)	7/8 (22)	3/8 (9.52)	5/8 (15.88)

Safety Precautions

To prevent injury to the user or other people and property damage, the following instructions must be followed.

- Be sure to read before installing the air conditioner.
- Be sure to observe the cautions specified here as they include important items related to safety.
- Incorrect operation due to ignoring instruction will cause harm or damage. The seriousness is classified by the following indications.

AWARNING This symbol indicates the possibility of death or serious injury.

▲ CAUTION

This symbol indicates the possibility of injury or damage to properties only.

■ Meanings of symbols used in this manual are as shown below.

	Be sure not to do.
0	Be sure to follow the instruction.

AWARNING

■ Installation

Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit.

 There is risk of fire or electric shock.

For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized Service Center.

· Do not disassemble or repair the product. There is risk of fire or electric shock.

Always ground the product.

· There is risk of fire or electric shock.

Install the panel and the cover of control box securely.

· There is risk of fire or electric shock

Always install a dedicated circuit and breaker.

 Improper wiring or installation may cause fire or electric shock.

Use the correctly rated breaker or fuse.

· There is risk of fire or electric shock

Do not modify or extend the power cable.

 There is risk of fire or electric shock.

Do not let the air conditioner run for a long time when the humidity is very high and a door or a window is left open.

· Moisture may condense and wet or damage furniture.

Be cautious when unpacking and installing the product.

· Sharp edges could cause injury. Be especially careful of the case edges and the fins on the condenser and evaporator.

For installation, always contact the dealer or an Authorized Service Center

· There is risk of fire, electric shock, explosion, or injury.

Do not install the product on a defective installation stand.

 It may cause injury, accident. or damage to the product.

Be sure the installation area does not deteriorate with age.

· If the base collapses, the air conditioner could fall with it. causing property damage. product failure, and personal iniurv.

Operation -

Do not store or use flammable gas or combustibles near the product.

· There is risk of fire or failure of product.



■ Installation —

Always check for gas (refrigerant) leakage after installation or repair of product.

 Low refrigerant levels may cause failure of product.

Do not install the product where the noise or hot air from

the outdoor unit could dam-

age the neighborhoods.

Install the drain hose to ensure that water is drained away properly.

· A bad connection may cause water leakage.

Use two or more people to lift and transport the product.

 It may cause a problem for your
 Avoid personal injury. neighbors.

Keep level even when installing the product.

· To avoid vibration or water leakage.

Do not install the product where it will be exposed to sea wind (salt spray) directly.

· It may cause corrosion on the product. Corrosion, particularly on the condenser and evaporator fins, could cause product malfunction or inefficient operation.

If you eat the liquid from the batteries, brush your teeth and see doctor. Do not use the remote if the batteries have leaked.

 The chemicals in batteries could cause burns or other health hazards.


Safely dispose of the packing materials.

- · Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries.
- Tear apart and throw away plastic packaging bags so that children may not play with them. If children play with a plastic bag which was not torn apart, they face the risk of suffocation.

Installation

Selection of the best location

- Where optimum air distribution can be ensured.
- Where nothing blocks air passage and install the duct work.
- Where condensate can be properly drained.
- Where the ceiling is strong enough to bear the indoor unit weight.
- Where the false ceiling is not noticeably on an incline.
- Where sufficient clearance for maintenance and service can be ensured.
- Where piping between indoor and outdoor units is possible within the allowable limit. Refer to the installation manual for the outdoor unit.
- Vertical Air Handling Unit can be installed for upflow and horizontal-left positions.

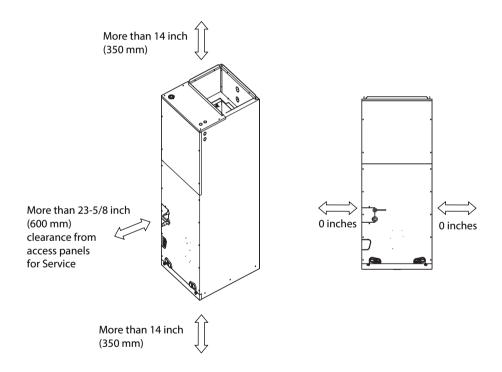


NOTE: The primary and secondary drain line must be trapped to allow proper drainage of condensate water, If the secondary drain line is not used, it must be capped.

ACAUTION

In the case of sea coast installation, salt residue may cause corrosion of cabinet and component parts. Please take appropriate anti-corrosion measures.

Upflow Installation

- · Position unit for plenum installation.
- The plenum should be secured in order to support the installation of adapter callers accommodate the installation of any duct work.
- · Seal all duct work according to local codes to prevent air leakage. Ensure that filter access is unobstructed.
- The air handler support platform should be sturdy enough to support the cabinet plus any accessory components including filter box.
- The minimum height clearance is 14inches(350mm) to maintain proper air flow.
- Vibration isolators (purchased locally) must be placed between the unit and the pedestal.
- · An illustration showing an example of where a vibration isolator should be added would clarify what the installing contractor should do to properly position the isolator.

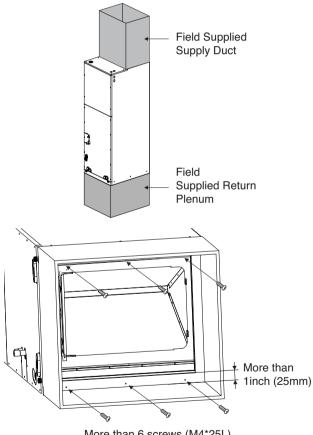


More than 6 screws (M4*25L)

▲ CAUTION

Do not connect the screws on Front and Rear side, it may cause the filter can not be mounted.


Duct work

- Over 10 screws should be used for joining supply duct with the unit.
- To prevent vibration transmission, exploit flexible connectors between duct and the unit. It is mandatory that the flexible connector between unit and duct at discharge connection should be made off heat resistive material when electric heater is installed.
- · Duct work must be insulated and covered with vapor barrier when routed through unconditioned space.
- Internal acoustical insulation lining may necessary for the metal duct system if it do not have 90° elbow and 10ft of main duct to first branch takeoff
- It is advised that a fibrous duct work could be used as a substitute if built and installed in accordance with the most recent edition of SMACNA construction standard on fibrous glass ducts.
- Collectively fibrous duct work and acoustical lining shall obey National Fire Protection Association. standards 90A or B as tested by UL standard 181 for class 1 air ducts.
- · Seal around the delivery duct subsequent to when the duct is secured so that to facilitate prevention of air leakage.

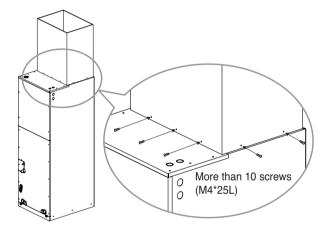

Horizontal-left Installation

- It is particular that the units should not be installed in such a manner that the access panels facing up or down
- It should be confirmed that the installation is in accordance with all relevant building codes that may necessitate installation of external condensate pan.
 - -Set up a support for unit by locating it in or above external condensate pan.
- · Angle steel support brackets with threaded rods which supporting the units from the underside should be used as shown in the figure below if the units are suspended.
- If not suspended then also it should be supported as same as mentioned above and also carefully isolated to avoid sound transmission. The size of the support should comparatively bigger than the unit and the unit must be place at centre of the support.
- · Locally available vibration isolators must be placed between the unit and the support.
- The same installation method of up flow type has to be used in the case of Return Plenum and supply duct.

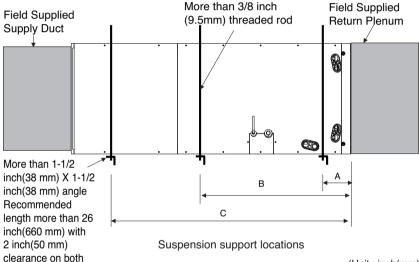

(Unit:inch(mm))

Caapcity		Dimension	
(kBtu(RT))	А	В	С
18(1.5) 24(2.0) 30(2.5) 36(3.0)	4(100)	23(580)	41-1/2 (1050)
42(3.5) 48(4.0) 54(4.5)	4(100)	29(730)	48(1220)

▲ CAUTION


sides of unit

To ensure proper drainage for horizontal installations, unit must be installed so it is within 1/8" level of the length and width of unit.

Preparation of Piping


Cut the pipes

- 1. Use the pipes purchased locally.
- 2. Measure the distance between the indoor and the outdoor unit.
- 3. Cut the pipes a little longer than measured distance.

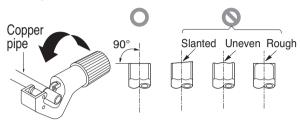


Burrs removal


- 1. Completely remove all burrs from the cut cross section of pipe/tube.
- 2. While removing burrs put the end of the copper tube/pipe in a downward direction while removing burrs location is also changed in order to avoid dropping burrs into the tubing.

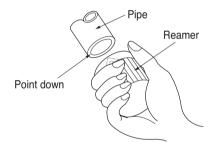

Connecting Pipes to the Indoor Unit

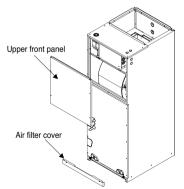


1. First detach the upper front panel followed by air filter cover from the body.

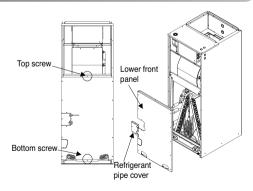


2. Detach the lower front panel and refrigerant pipe cover from the body.


Note: While detaching the lower front panel, remember to remove the top and bottom screws.

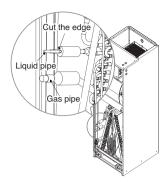

3. Cut the refrigerant pipe (Liquid Pipe edge) and make sure the factory charged refrigerant is emerging out. (This confirms there is no leakage.)

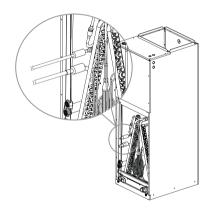


- 5. Connect the field piping by brazing.
 - Wrap the gas and liquid pipe with wet towel. (If not wrapped with a wet towel, there may be damages drain pan or pipe insulations.)

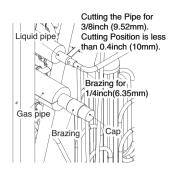

- 4. Detach Liquid and Gas Pipe
 - Gas Pipe: Remove the Cap by Brazing
 - Liquid Pipe: There are 2 kinds of Liquid Pipe.

Liquid Pipe	Detach Pipe
1/4 (6.35)	Brazing
3/8 (9.52)	Cutting

- If you do not use proper cutter size when cutting liquid pipe, it would make damage to the gas pipe.

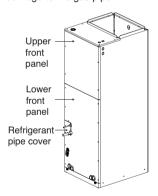

6. Attach the two panels to the body.

ACAUTION

Completely remove the refrigerant and then do brazing. Otherwise, high pressure is a risk of injury due to explosions


Note: Overlap the connection pipe insulation material and the indoor unit pipe insulation material. Bind them together with vinyl tape so that there may be no gap.

ACAUTION

2

3

Always blow nitrogen into pipe which is brazed. Always use a non-oxidizing brazing material for brazing the parts and do not use flux. If not, oxidized film can cause clogging or damage to the compressor unit and flux can harm the copper piping or refrigerant oil.

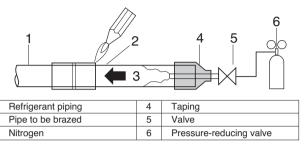



Note: The torch tip should be positioned at the opposite angle to shop the correct way to apply heat on the pipe coupling.

Insulation

Insulate the joint and tubes completely.

Thermal insullaton: All thermal insulation must comply with local requirement.

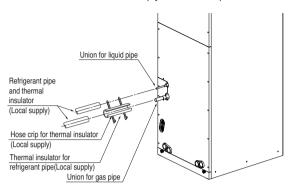

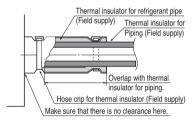

Recommend

			ned location	Non-air conditioned location		
Classification		Note1) General location	Note2) Special location	Note3) General location	Negative condition	
	Ø1/4(6.35)	Above t 3/8	Above t 3/8	Above t 3/8	Above t 3/8	
Liquid Pipe	Ø3/8(9.52)	(9.52)	(9.52)	(9.52)	(9.52)	
Liquid 1 ipe	Above Ø1/2	Above t 1/2	Above t 1/2	Above t 1/2	Above t 1/2	
	(12.7)	(12.7)	(12.7)	(12.7)	(12.7)	
	Ø3/8(9.52)					
	Ø1/2 (12.7)		Above t 3/4 (19.05)	Above t 3/4 (19.05)		
	Ø5/8(15.88)	Above t 1/2				
	Ø3/4(19.05)	(12.7)				
	Ø7/8(22.22)					
Gas Pipe	Ø1(25.4)				Above t 1 (25)	
	Ø1-1/8(28.58)					
	Ø1-1/4(31.75)	Ab + 0/4				
	Ø1-3/8(34.9)	Above t 3/4 (19.05)	Above + 1 (0E)	Above t 1 (25)		
	Ø1-1/2(38.1)	(10.00)	Above t 1 (25)			
	Ø44.45(1-3/4)					


- * Note 1) General location: When the pipe passes through indoors in which the indoor unit is operated - Apartment, classroom, office, mall, hospital, office-tel etc.
- Note 2) Special location
 - When the location is air conditioned but has severe temperature/humidity difference due to high ceiling
 - Church, auditorium, theater, lobby etc.
 - 2. When the location is air conditioned but the internal temperature/humidity of the ceiling finishing is high
 - Bathroom/swimming pool locker room etc. (Building with roof ceiling of sandwich assembly type)
- Note 3) General location: When the pipe passes indoors where the indoor unit is not operated
 - Hall way etc. (Dormitory, school, office-tel)
- Note 4) Negative condition: When below conditions 1 and 2 are met.
 - 1. When the pipe passes indoors where the indoor unit is not operated
 - 2. When the humidity is high, regionally, and there is no air flow in the pipe passing area
 - When installing the outside unit within the outside pipe tray or at a location where it is ok to have freezes, apply 13t.
 - If you are not sure with the selection of heat insulation material, coordinate with the supervision or HQ.
 - The thickness of the above heat insulation material is based on the heat conductivity of 0.088W/m°C.


Condensate Drain

- The drainage performance has to be optimized by installing both primary and secondary drain lines along with properly sized condensate traps in order to prevent property damage.
- Care should be taken to avoid the blocking of filter access panel while connecting condensate drain lines. The primary and secondary condensate traps has to be primed after connecting to the drain pan.
- A field supplied external condensate pan has to be installed underneath the entire unit if the unit is above the living space. Other wise damage may result due to condensate over flow. Also a additional external condensate line should run from unit in to the pan.
- The entire condensate should be drained from the external condensate pan to some noticeable area. It is advised to install traps in condensate lines as near to the coil as possible. The outlet of each trap should be below its connection to the condensate pan avert condensate from overflowing drain pan.
- If located above the living area then all traps should be prime and insulated and also tested for leakage.
- PVC 3/4 inch(19.05mm) male pipe thread fitting is advised to use at condensate pan with gentle tight.
- For easy drain flow the drain hose has to be pointed downward.
- Care should be taken to not use pipe joint connection or PVC/CPVC for units drain line connection. Use only Teflon tape.
- For preventing winter freeze up on condensate line special means should be provided for drainage.

GRADIENT OF UNIT AND DRAIN PIPING

- Alway lay the drain with downward inclination(1/50 to 1/100). Prevent any upward flow or reverse flow in any part.
- 5/24 inch(5mm) or thicker formed thermal insulator shall always be provided for the drain pipe.

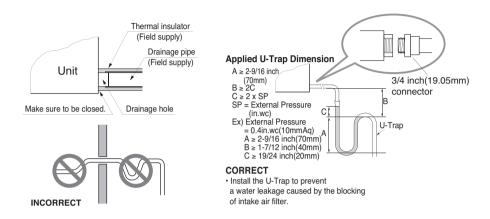

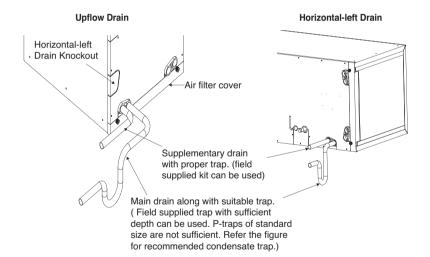

ACAUTION


The supplied flexible drain hose should not be strained. A strained hose may cause leakage of water.

Wiring Connection

Connect the wires to the terminals on the control board individually according to the outdoor unit connection.

Ensure that the color of the wires of outdoor unit and the terminal No. are the same as those of indoor unit respectively.


208/230V 10 60Hz

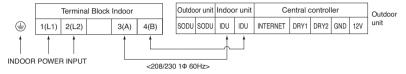


Unit: inch(mm)

	Min wire size (AWG)	Size of conduit (inch(mm))	Knockout diameter (inch(mm))
Power cable	22	1/2 (21.3)	7/8 (22.2)
Communication cable	22	1/2 (21.3)	7/8 (22.2)

^{*} Copper wire should be used.

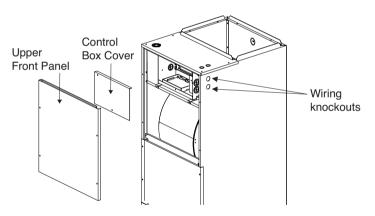

1. Detach the upper panel & control box cover. And remove two wiring Knockouts.

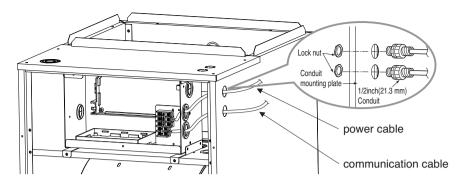

2. Install conduit to the wiring knockouts. Connect power/communication cable to terminal block through the wiring knockouts.

NOTF:

- 1. Separately wire power supply cord and connecting cable.
- 2. Use heat-proof electrical wiring capable of withstanding temperature up to 75°C(167°F).
- 3. Use outdoor and waterproof connection cable NRTL(UL, ETL, CSA...) listed and rated more than 300V for the connection between indoor and outdoor unit, and this cable should be enclosed in conduit

▲ CAUTION

After the confirmation of the above conditions, prepare the wiring as follows:

- 1) Never fail to have individual power specialized for the air conditioner. As for the method of wiring, follow by the circuit diagram posted on the inside of control box cover.
- 2) Provide a circuit breaker switch between power source and the unit.
- 3) The screws which fasten the wiring in the casing of electrical fittings are liable to come loose from vibrations to which the unit is subjected during the course of transportation. Check them and make sure that they are all tightly fastened. (If they are loose, it could give rise to burn-out of the wires.)
- 4) Specification of power source
- 5) Confirm that electrical capacity is sufficient.
- 6) Be sure that the starting voltage is within 10% plus or minus of nameplate voltage rating.
- 7) Confirm that the cable thickness is as specified in the power sources specification. (Particularly note the relation between cable length and thickness.)
- 8) Never fail to equip GFCI breaker when installing the air handler near wet or moist locations.
- 9) The following troubles would be caused by voltage drop-down.
 - · Vibration of a magnetic switch, damage on the contact point, fuse breaking, disturbance by the normal function of an overload protection device.
 - Proper starting power is not given to the compressor.


HAND OVER

Teach the customer the operation and maintenance procedures, using the operation manual. (air filter cleaning, temperature control, etc.)


NOTE: Openings where field wiring enters the cabinet must be completely sealed.

Installation of Wired Remote Controller

- Please fix tightly using provided screw after placing remote controller setup board on the place where
 you like to setup.
 - Please set it up not to bend because poor setup could take place if setup board bends.
 Please set up remote controller board fit to the reclamation box if there is a reclamation box.

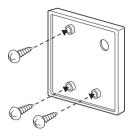

- 2. Can set up Wired remote controller cable into three directions.
 - Setup direction: the surface of wall reclamation, upper, right
 - If setting up remote controller cable into upper and right side, please set up after removing remote controller cable guide groove.
 - * Remove guide groove with long nose.
- 1) Reclamation to the surface of the wall
- 2 Upper part guide groove
- ③ Right part guide groove

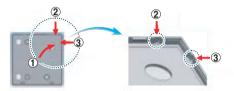



%Wire guide grooves%

- Please fix remote controller upper part into the setup board attached to the surface of the wall, as the picture below, and then, connect with setup board by pressing lower part.
 - Please connect not to make a gap at the remote controller and setup board's upper and lower, right and left part.


When separating remote controller from setup board, as the picture below, after inserting into the lower separating hole using screw driver and then, spinning clockwise, remote controller is separated.

- There are two separating holes. Please individually separate one at a time.
- Please be careful not to damage the inside components when separating.

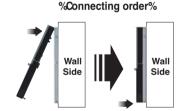

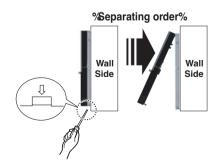

4. Please connect indoor unit and remote controller using connection cable.

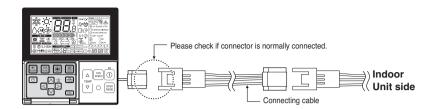

5. Please use extension cable if the distance between wired remote controller and indoor unit is more than 10m.

ACAUTION

When installing the wired remote controller, do not bury it in the wall.


(It can cause damage in the temperature sensor.)

Do not exceed 50m (164').

(This would result in control signal degradation manifesting in a communication error code.)

- When installing the extension cable, check the connecting direction of the connector of the remote controller side and the product side for correct installation.
- If you install the extension cable in the opposite direction, the connector will not be connected.
- Specification of extension cable: 2547 1007 22# 2 core 3 shield 5 or above.

Name and function of wired remote controller(Accessory)

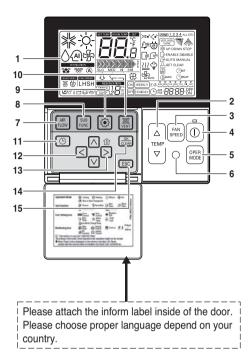


- 1. Operation indication screen
- 2. Set temperature button
- 3. Fan speed button
- 4. on/off button
- 5. Opration mode selection button
- 6. Wireless remote controller receiver
 - · Some products don't receive the wireless signals.
- 7. Air flow button
- 8. Subfunction button
- 9. Function setting button
- 10. Ventilation button
- 11. Reservation
- 12. Up,down,left,right button
 - To check the indoor temperature, press button.
- 13. Room temperature button
- 14. Setting/Cancel button
- 15. Exit button


- * Some functions may not be operated and displayed depending on the product type.
- * If you want to know more information, please refer to Wide Wired Remote Control Manual.

Model: PQRCVSL0 (Black Color) PQRCVSL0QW (White Color)

Name and function of wireless remote controller(Accessory)

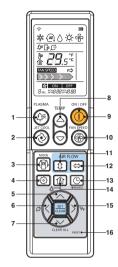

PQWRCDF0 (Heat pump) PQWRHDF0 (Cooling only)

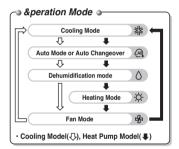

* If you want to know more information, please refer to Wireless Remote Control Manual.

1. Plasma button

Not working.

2. Jet cool button Not working.

3. Operation mode selection button

Used to select the operation mode. 4. Function setting button

Used to set electric heater.

5. Icd luminosity button

Not working. 6. Smart clean button

Not working.

7. Clear all button

Used to clear all timer. 8. Room temperature setting button

Used to select the setting outlet temperature

9. on/off button

Used to turn off/on the unit.

10. Indoor fan speed selection button

11. Auto swing button

Not working.

12. Horizontal airflow direction control button Not working.

13. Timer and time setting button

Used to set the time of starting or stopping and sleeping operation.

14. Room temperature checking button


15. °C/°F switch button

Used to switch temperature reading from Celsius to Fahrenheit.

16. Reset button

Used to reset the remote controller.

Electric Heater

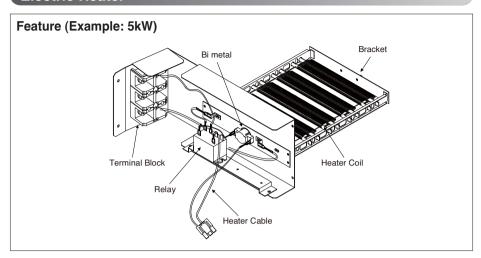

^{*} Note: Image shown above may vary depends on model capacity.

Available heater in model

Capacity	Heater Capacity (kW)				
(kBtu/h (RT))	5	10	15	20	
18(1.5)	0	Not available	Not available	Not available	
24(2.0)	0	0	Not available	Not available	
30(2.5)	0	0	Not available	Not available	
36(3.0)	0	0	Not available	Not available	
42(3.5)	0	0	0	0	
48(4.0)	0	0	0	0	
54(4.5)	0	0	0	0	

^{*} If you want to know more optional operation, please refer to the Electric Heater Manual.

* Heater Model 5kW: ANEH053B1 10kW: ANEH103B2 15kW: ANEH153B2 20kW: ANEH203B2

Dip Switch Setting of Indoor unit PCB

	Function	Description	Setting Off	Setting On	Default
SW1	Communication	N/A (Default)	-	-	Off
SW2	Cycle	N/A (Default)	-	-	Off
SW3	Group Control	Selection of Master or Slave	Master	Slave	Off
SW4	Dry Contact Mode	Selection of Dry Contact Mode	Wired/Wireless remote controller Selection of Manual or Auto operation Mode	Auto	Off
SW5	Installation	Fan continuous operation	Continuous operation Removall	-	Off
SW6	Heater linkage	Selection of Heating Working	-	-	Off
SW7	Ventilator linkage	Selection of Ventilator linkage	Linkage Removal	Working	
	Vane selection (Console)	Selection of up/down side Vane	Up side + Down side Vane	Up side Vane Only	Off
	Region selection	Selection tropical region	General model	Tropical model	
SW8	Etc.	Spare	-	-	Off


ACAUTION

- 1. In Multi V Models without Electric Heater
 - Dip switch 1, 2, 6, 8 must be set OFF.
- 2. In the case of Multi V Models with Electric Heater, Dip switch 5,6 must be set ON.
 - SW 5 ON; Fan operates continuously. (During defrosting or oil return operation, uninterrupted heating can be attained, as a result of continuous heater and fan operation.)
 - SW5 OFF: Fan discontinuous operation (There would be reduction in heating capacity while defrosting or oil return operation.)
 - SW6 ON: Automatic Heater operation (Heater operates automatically according to the heater logic without owner's intervene.)
 - SW6 OFF: Heater manual operation (Owner's involvement is required for on/off operation. But the heater operation would be as per the heater logic.)

Group Control Setting

1. Group Control 1

Wired remote controller 1

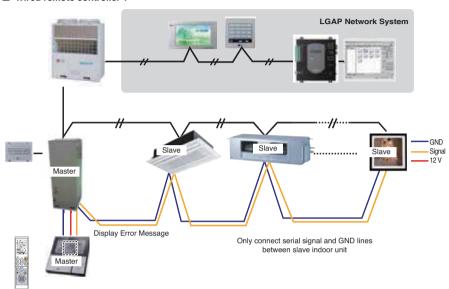

■ Dip Switch in PCB (Cassette and Duct Type indoor units)



- It is possible to 16 indoor units(Max) by one wired remote controller.
 Set only one indoor unit to Master, set the others to Slave.
- 2. It is possible to connect with every type of indoor units.
- 3. It is possible to use wireless remote controller at the same time.
- 4. It is possible to connect with Dry Contact and Central controller at the same time.
- The Master indoor unit is possible to recognize Dry Contact and Central Controller only.
- In case of Central controller and Group controller at the same time, it is possible to connect standard 2series indoor units or later since Feb. 2009.
- In case of Central controller setting, the Central controller can control indoor units after setting only the address of master indoor unit.
- Slave indoor unit will be operated like master indoor unit.
- Slave indoor unit can not be individually controlled by Central controller.
- Some remote controller can't perform with Dry Contact and Central controller at the same time. So contact us further information about it.

5. In case of any error occurs at indoor unit, display on the wired remote controller.


Exception of the error indoor unit, an individual indoor unit control possibility.

6. In case of Group Control, it is possible to use following functions.

- Selection of operation options (operation/stop/mode/set temperature)
- Control of flow rate (High/Middle/Low)
- It is not possible at some functions.
- * Master/Slave setting of indoor units be set possible using a PCB Dip Switch.
- # It is possible to connect indoor units since Feb. 2009. In the other cases, please contact LGE.
- # It can be the cause of malfuctions when there is no setting of master and slave.

2. Group Control 2

■ Wired remote controllers

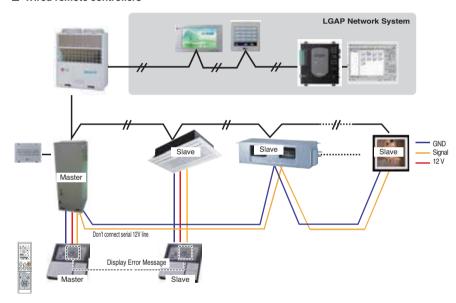

It is possible to control N indoor units by wired remote controller M units. (M+N≤17 Units)


Set only one indoor unit to Master, set the others to Slave.

Set only one wired remote controller to Master, set the others to Slave.

Other than those, it is same with the Group Control 1.

3. 2 Remote Control


■ Wired remote controller 2 + Indoor unit 1

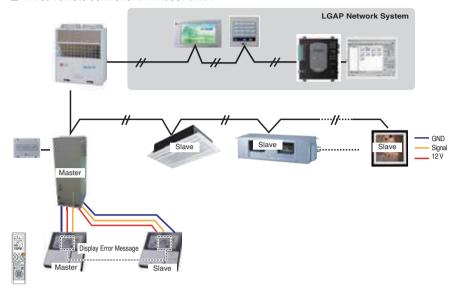

- 1. It is possible to connect two wired remote controllers with one indoor unit.
- 2. Every types of indoor unit is possible to connect two remote controller.
- 3. It is possible to use wireless remote controller at the same time.
- 4. It is possible to connect with Dry Contact and Central controller at the same time.
- 5. In case of any error occurs at indoor unit, display on the wired remote controller.
- 6. There isn't limits of indoor unit function.
- * Maximum 2wired remote controllers can be connected with 1 indoor unit.

4. Accessories for group control setting


It is possible to set group control by using below accessories.

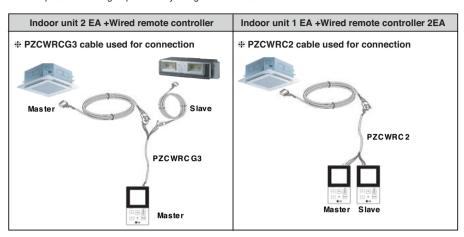


How to Set E.S.P?

This is the function that decides the strength of the wind for each wind level and because this function is to make the installation easier.

- · If you set ESP incorrectly, the air conditioner may malfunction.
- This setting must be carried out by a certificated-technician.

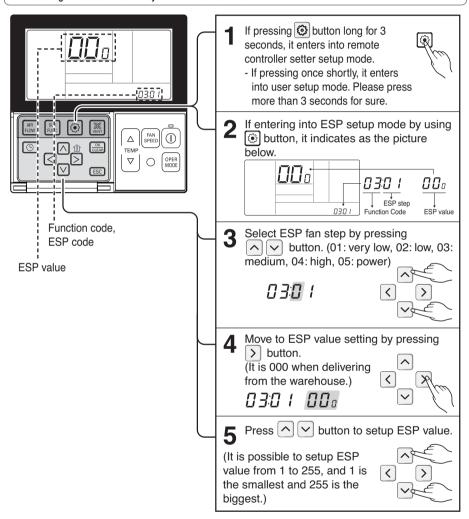

· When setting ESP value on the product without very weak wind or power wind function, it may not work.

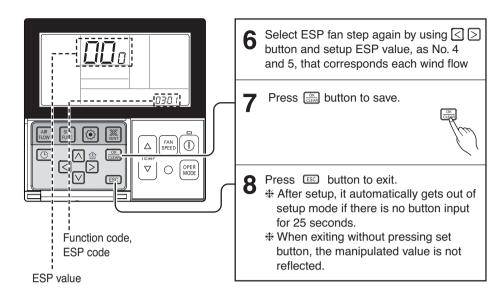

- Please be careful not to change the ESP value for each fan step.
- It does not work to setup ESP value for very low/power step for some products.
- ESP value is available for specific range belongs to the product.

Product Data

External Static Pressure & Air Flow

Capacity Flow rate			Setting Value @ ESP(in.wc)								
(kBtu/h(RT))	(CFM)	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
	High(1475)	77	82	87	93	98	102	110	115	115	115
54(4.5)	Middle(1400)	74	79	84	91	96	102	110	115	115	115
	Low(1260)	67	75	80	87	90	98	102	110	115	115
	High(1400)	74	79	84	91	96	102	110	115	115	115
48(4.0)	Middle(1260)	67	75	80	87	90	98	102	110	115	115
	Low(1000)	56	65	72	77	84	90	98	105	108	115
	High(1250)	67	75	80	87	90	98	102	110	115	115
42(3.5)	Middle(1100)	61	67	75	80	87	92	100	108	110	115
	Low(1000)	56	65	72	77	84	90	98	105	108	115
	High(990)	80	85	90	95	100	103	103	103	103	103
36(3.0)	Middle(880)	65	72	80	85	92	98	103	103	103	103
	Low(800)	65	69	77	82	90	96	101	101	101	101
	High(880)	65	72	80	85	92	98	103	103	103	103
30(2.5)	Middle(800)	62	69	77	82	90	96	101	101	101	101
	Low(630)	53	65	70	75	85	91	96	96	96	96
	High(710)	56	67	74	78	87	94	98	98	98	98
24(2.0)	Middle(640)	53	65	70	75	85	91	96	96	96	96
	Low(480)	53	55	64	70	79	84	92	92	92	92
	High(530)	53	58	66	72	82	85	95	95	95	95
18(1.5)	Middle(480)	53	55	64	70	79	84	92	92	92	92
	Low(380)	53	54	62	69	77	83	92	92	92	92

Air handler units are UL Listed up to 0.5 in.wc external static pressure, including air filter, set coil, and largest kW size heater, unless otherwise noted.

- Flow rate(CFM) is decreased by 3% per 0.1in.wc from 0.8 in.wc to 1.0 in.wc
- If flow rate(CFM) is increased by 400CFM/ton from 1.5RT to 2.5RT of capacity, the ESP value should be increased by 4.
- If flow rate(CFM) is increased by 400CFM/ton from 3.0RT to 4.5RT of capacity, the ESP value should be increased by 5.
- in.wc = inch Water Column, inAq
- Factory Default: High Static Pressure, High static pressure is 0.5 in.wc, Low static pressure is 0.3 in.wc

If you set ESP incorrectly, the air conditioner may cause cooling & heating capacity down or malfunction.

Minimum airflow by heater capacity

(Unit: CFM)

Capacity	Heater Capacity (kW)					
(kBtu/h (RT))	5	10	15	20		
18(1.5)	380	Not available	Not available	Not available		
24(2.0)	480	480	Not available	Not available		
30(2.5)	630	630	Not available	Not available		
36(3.0)	780	780	Not available	Not available		
42(3.5)	1000	1000	00 1000 10			
48(4.0)	1000	1000	1000	1000		
54(4.5)	1300	1300	1300	1300		

ACAUTION

Do not use less than minimum airflow.

There is risk of fire or damage to the product.

Electric Heater Static pressure drop factors

Heater Capacity(kW)	Static pressure drop (in.wc)
0	0
5	- 0.01
10	- 0.02
15	- 0.04
20	- 0.06

If the electric heater has been installed, then the ESP value has to be set.

For every increase in static pressure by 0.01 inWC, the ESP value should be increased by 1.

If the setting ESP value is inappropriate, the provided safety device will turn off the heater according to the airflow.

^{*} in.wc = inch Water Column, inAq

Air Filter (Field supply) Static pressure drop factors

Capacity (kBtu/h(RT))	Flow Rate (CFM)	Static pressure drop (in.WC)
18 (1.5)	High(530)	-0.02
	Middle(480)	-0.02
	Low(380)	-0.01
24 (2.0)	High(710)	-0.04
	Middle(640)	-0.03
	Low(480)	-0.02
30 (2.5)	High(880)	-0.05
	Middle(800)	-0.05
	Low(630)	-0.03
36 (3.0)	High(990)	-0.07
	Middle(880)	-0.05
	Low(800)	-0.05
42 (3.5)	High(1250)	-0.11
	Middle(1100)	-0.09
	Low(1000)	-0.07
48 (4.0)	High(1400)	-0.14
	Middle(1260)	-0.11
	Low(1000)	-0.07
54 (4.5)	High(1475)	-0.18
	Middle(1400)	-0.16
	Low(1260)	-0.12

If the air filter has been installed, then the ESP value has to be set.

For every increase in static pressure by 0.01 inWC, the ESP value should be increased by 1.

Note: Filters should be used a rating of MERV 4 or less.

If you use filters that has a rating MERV 5 or above, it can cause cooling & heating capacity down.

